



AZTEC CBD Starter Kit User Manual

Congratulations on purchasing your Starter Kit

Please read instructions and precautions before using the CCELL Power Supply.


Filling instructions

01. Insert a blunt tipped needle into the space between the airway + the outer wall of the cartridge and fill with 1ml of oil.

- Cartridge must be upright when filling the reservoir with oil
- Recommended Fill Temperature Between 90° - 130° F
- Do not fill into the middle post, or severe leaks will occur
- Do not overfill or allow oil to enter center way
- Fill up to the top of the glass

2. Immediately after filling, insert + press the mouthpiece until fully sealed. Mechanical assistance, such as an arbor press or channel lock pliers are required to fully seal the mouthpiece.

- Do not leave any silicone caps on tip or base of cart when capping.
- If using pliers, cushion jaws with cloth or tape to prevent damage
- Failure to insert the mouthpiece immediately may cause leakage.
- Do not flip cartridge upside down, CCELLs must remain upright.
- If cleaning/wiping down cart: Use diluted mixture of 50% or less alcohol, and water

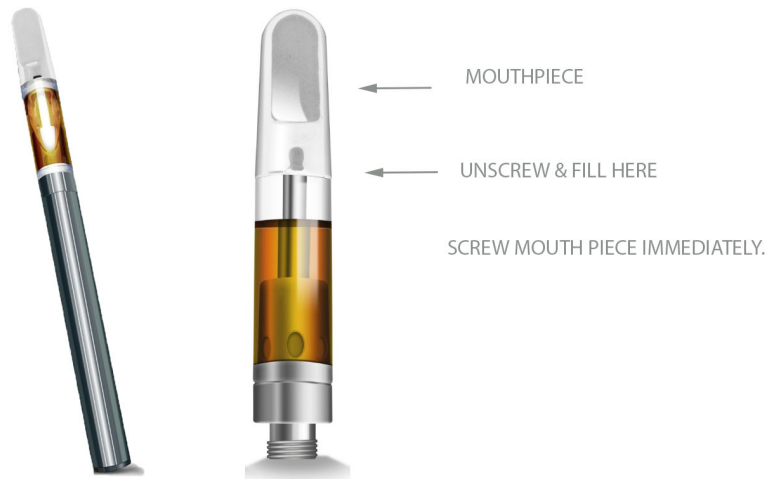

Caution

- If overfilled when press fitting the mouthpiece, oil will overflow and drip down into the cartridge. Wipe with alcohol immediately.
- If overfilled, cartridges exposed to high temperatures than during filling, will cause oil in cartridge to expand and leak.
- If ANY leaks are experienced, for any cartridges filled after leaking cartridge, flip the cartridge upside down after filling to purge more air.
- ANY OIL RESIDUE left in the area cartridge where the tip is pressed on may cause the tip to popback up.
- Warranty is void if filling instructions are not followed.
- Please wait at least 30 minutes before using to allow the atomizer to saturate for the best vapor production.



